



This user notice refers to all Mobi-mat® anti-slip access matting.
Read carefully the following method and always follow the safety rules.

Direction for use

Step 1: **Level the ground** with a rake and remove large stones and debris.

Step 2: **Unroll the mat** at the desired place. The upside is the smooth side.
The serial number label is on the downside.

Step 3: **Anchor the first end of the mat:**



Starting with the spikes in the eyelets.
Continue with the staples in the rigid connector.

Step 4: **Pull the mat taut from the opposite end.** Do not use vehicle to stretch the mat.

Step 5: **Once the mat is well stretched, anchor the opposite end:**



Starting with the spikes in the eyelets.
Continue with the staples in the rigid connector.


For a perfect finish, bury the end of the mat (dig a 10cm - 4" trench before anchoring the mat).




Scan the QR code and watch our installation video

Please note that all spikes and staples have to be anchored to ensure the best use of the product.


1m ; 3.25'

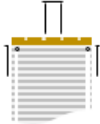


1,5m ; 5'

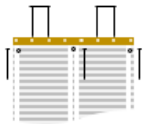

2m ; 6.5'

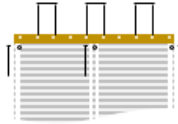


3m ; 10'

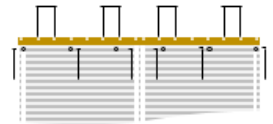

The number of stakes and staples changes according to the width

Step 6: **Anchor the sides of the mat** (if equipped) **with spikes.**

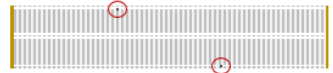

Mat connection


Step 1: **Align the two mats end-to-end.**

Step 2: **Overlap the connectors of the two mats** [if necessary, reverse the mat end-to-end in order to get the correct end].




Step 3: **To ensure the longevity and secure placement of Mobi-mat®, all spikes and staples must be fully inserted into the connectors and eyelets. No holes should be left unanchored, as proper anchoring is critical to maintaining the stability and durability of the mat over time.**

1m ; 3.25'

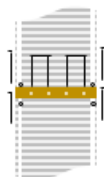


1,5m ; 5'

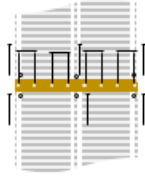

2m ; 6.5'




3m ; 10'

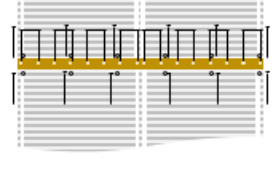

Connection between new design Mobi-mat ("h" connectors) with old design Mobi-mat ("C/X" connectors)

Step 1: Slide the "X" connector between the "h" connector and the "C" connector

Step 2: Anchor the "X" connector and the "h" connector.

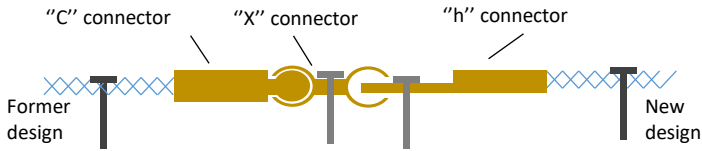

Maintenance:

- Use a leaf blower or a broom to remove sand from the mat.
- If too much sand accumulates underneath, re-install it.
- Store the mats rolled-up, horizontally (do not store mats vertically).
- Before storage, rinse with clear water

Safety rules:



- Check underground facilities (gas, electricity...) before installing the mats.
- Use safety glasses, gloves and shoes during installation.
- Never use for other applications.
- After installation check regularly that no part (stake, staple, spike...) can injure people or damage equipment (vehicle, wheelchair, building...).

Anchoring option:

- Concrete anchor
- Wood anchor
- Hard ground anchor
- Underwater anchoring on soft and hard ground



Product lifecycle management:

- Do not abandon or throw Mobi-mat® into nature
- Bring your Mobi-mat® access mats to the nearest recycling center to recycle them.
- Or contact us, we can guide you in the end-of-life management of your mats.