


This user notice refers to Mobi-deck™, deck for modular access.  
Read carefully the following instructions and always follow the safety rules.

### PRODUCT ACCESSORIES

#### Spikes

Spikes are provided to anchor AccessDeck to the ground. They are galvanised and 50 cm long.

**2 connectors and 2 spikes included with each unit of Mobi-deck™.**

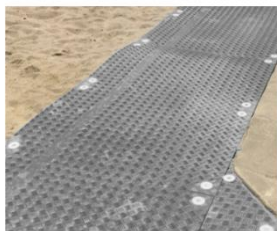

#### Connectors

To connect Mobi-deck™ panels together and keep a firm surface, we provide aluminum connectors which are very resistant and easy to install. Use of anchoring spikes is not always necessary. The connectors enable to create modular accesses and adapt the path to your site.

#### Aluminium connectors



*Double aluminum connectors  
(create a platform)*



#### Bolt connectors (option)



*Double bolt connectors*



### APPLICATIONS & INSTALLATION

Mobi-deck™ ensures stability on soft grounds like sand, grass, gravels and snow. They are designed to provide comfort for barefoot users.

Mobi-deck™ withstands vehicle traffic while creating an access for people with reduced mobility and pedestrians. With their 8 holes, Mobi-deck™ panels offer a great modularity and can be adapted to many configurations: pathways, platforms, crossroads etc. (see patterns below).

## PRECAUTIONS FOR INSTALLATION

- Leave a slight space between each plate to anticipate potential expansion (between 12 and 15mm). **Dilatation of 2mm per linear meter for a 10°C temperature change.**
- Install Mobi-deck™ after 24 hours of thermal rest and adapted temperature (not extreme cold or hot) to prevent from dilatation effects.



Mobi-deck™ can be installed by or 2 people: a section of 100m can be installed within 1 hour. A hammer is required if the ground is hard.

## WARRANTY

**DESCHAMPS offers a two (2) year warranty starting at the date of your Purchase Order. This warranty only covers manufacturing defects of the product. Alterations related to normal use are not considered as manufacturing defects. Damages caused by vandalism or the passage of vehicles (others than the one corresponding to the intended or expected use of the product) are not covered by the warranty. The warranty does not cover:**

- The normal use of Mobi-deck™ or improper care, operation, maintenance and storage of Mobi-deck™.
- An accident or natural disaster.
- Modifications that have been made without written consent of DESCAMPS.
- Maintenance and transports costs that can be necessary if reparations are required.

If you are not satisfied by the intended conditions or reparations that have been made, please contact directly DESCAMPS company. Products may not be returned without consent from DESCAMPS. The two (2) year limited warranty is applicable to the original purchaser only.

## REFERENCES



Mobi-deck™ on the beach of Ajaccio - France



Mobi-deck™ fair in the New Jersey, USA



Mobi-deck™ on cobblestones, France

1H / 100 m<sup>2</sup>

